

## Technical insertion instructions for Interchangeable AC Blades

### Equipment and Supplies:

To get started using your power supply, you will need a:

1. GlobTek power supply Model Series including, but not limited to, GTM91099, GTM91120, GTM91085, GTM93048 or similar interchangeable blade GlobTek power supply.
2. One of several interchangeable AC blade assemblies including, but not limited to, R-NA-2(R), R-NA-3(R), R-UK-2(R), R-UK-3(R), R-SAA-2(R), R-SAA-3(R), R-EU-2(R), R-EU-3(R).

### Removing the Insert Before Use:

If an insert is included, then remove it by using a thumb or finger to push and hold the spring loaded locking key downward (Figure 1) while using another finger to slide the insert forward (Figure 2).



Figure 1



Figure 2

### Inserting the AC Blade:

1. Select the desired AC blade assembly. Slide and push the AC blade assembly until the AC blade assembly locks in place (Figure 3). A clicking sound will occur.



Figure 3

### Checking the AC Blade assembly for correct insertion

1. Hold the GlobTek power supply in one hand. Using another hand push on the AC blade assembly to ensure it is in place (Figure 4).



Figure 4

The Power Supply  
is ready to be used.

### Removing the AC Blade assembly:

1. Using thumb or finger, push and hold the spring loaded locking key downward. It is marked with an arrow (Figure 5).
2. Holding the locking pin down, pull on the AC blade to remove (Figure 6).



Figure 5



Figure 6

**\* Please note the blade assembly is "finger proof" which meets regulatory requirements against shock hazards.**